



How to HP Photosmart Premium e-All-in-One C310a

Head cleaning steps Photosmart C310A

Written By: Fer Rod



INTRODUCTION

It is necessary to have a container with hot water for cleaning head

Step 1 — Clean printhead



- Head cleaning steps Photosmart C310A

Step 2



- Step 2.
- 1. Turn on the printer and open the front cover 2. Remove the cartridges. Remove the cartridge Image: Remove the cartridge 3. Then and is on the printer, unplug the printer back power cord. 4. Remove the head. Lift the latch handle
- New line.

Para reensamblar tu dispositivo, sigue estas instrucciones en orden inverso.

